



Rear Bumper Aux Light Mount Kit

Ford Super Duty 2023+

NEW PRODUCT

Please visit www.aev-conversions.com to view the most current installation guide for this product.

This is a new product and we want to make sure that you receive the latest and most accurate information based on customer feedback, product revisions, and/or model year updates. We value customer feedback, so we encourage you to contact our Technical Support department if you have any suggestions on how to make the installation of this product easier or if you have any questions regarding the installation of this product. AEV's Technical Support can be reached by email at tech@aev-conversions.com or by giving us a call at (248)-926-0256.



PLEASE READ BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
LH SQ Light Bracket	1	Common Hand Tools
RH SQ Light Bracket	1	



I. VEHICLE PREPARATION

1. Install the FD5B2030AA and FD5B2031AA LH & RH light mount brackets using the existing AEV91242AA M12 Flange Bolts and AEV98067AA washers already installed on the bumper. Install the bolt and washer on the top side of the bracket, the nut on the bottom surface (Fig. 1).



Figure 1



2. Assemble the Baja light and bracket following Baja's provided instructions in the box. Install the light and bracket assembly onto the LH & RH SQ light mount brackets with their provided hardware. Make sure to align the lights as square to the bumper as possible (Fig. 2).



Figure 2

3. Feed the wiring through the dedicated holes in the center weldment, both LH & RH sides of the vehicle (Fig. 3).

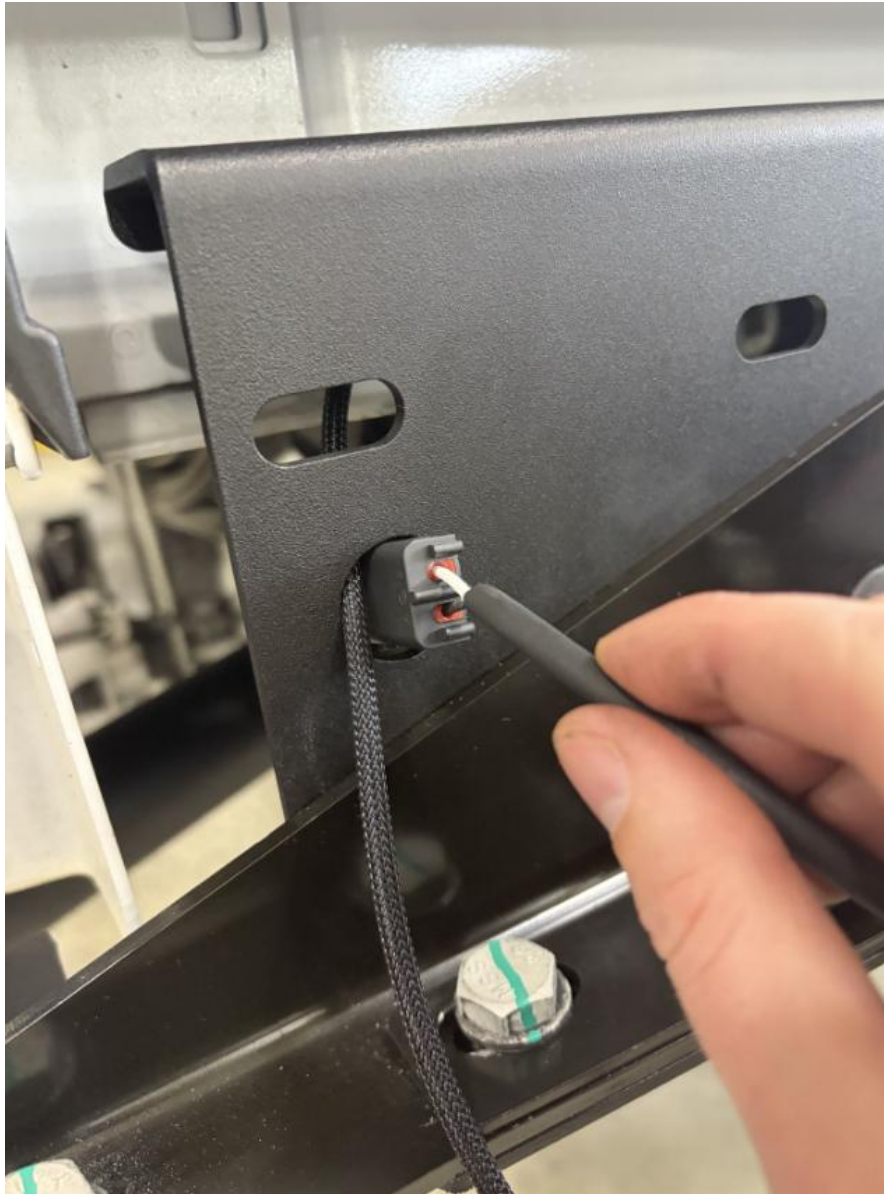


Figure 3