



GM LD Front Splash Guards

2022+ Chevy Silverado 1500 ZR2, 2023+ Chevy Silverado 1500 ZR2 Bison, 2022+ GMC Sierra 1500 AT4X and 2023+ GMC Sierra 1500 AT4X AEV Edition

NEW PRODUCT

Please visit www.aev-conversions.com to view the most current installation guide for this product.

This is a new product and we want to make sure that you receive the latest and most accurate information based on customer feedback, product revisions, and/or model year updates. We value customer feedback, so we encourage you to contact our Technical Support department if you have any suggestions on how to make the installation of this product easier or if you have any questions regarding the installation of this product. AEV's Technical Support can be reached by email at tech@aev-conversions.com or by giving us a call at (248)-926-0256.





PLEASE READ BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
RH & LH Rubber Splash Guards	1	Common Hand Tools
RH & LH Splash Guard Brackets	1	Drill and Drill Bits
Hardware Pack	1	Rust Prevention (Silver) Marker





LD Chevy Splash Guard Kit

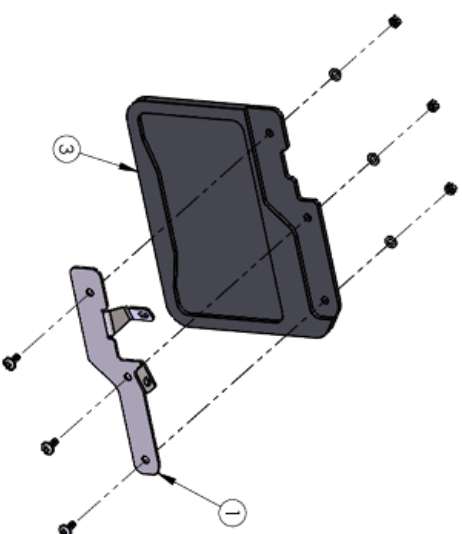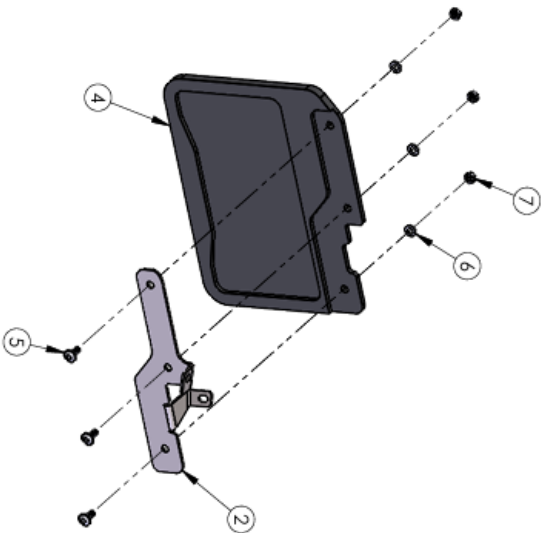

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	ATI22000AA	FRT RH SPLASH GUARD BRKT, T1 LD CHEVY	1
2	ATI22001AA	FRT LH SPLASH GUARD BRKT, T1 LD CHEVY	1
3	ATI21000AA	FRT RH SPLASH GUARD, T1 LD COMMON	1
4	ATI21001AA	FRT LH SPLASH GUARD, T1 LD COMMON	1
5	AEV91233AA	M8 X 1.25 X 20 BUTTON HEAD FLANGE SOCKET, BLACK	6
6	AEV98007AB	Washer, M8 - PS-Black (91166A270)	6
7	AEV93052AA	M8 X 1.25 STOVER NUT, BLACK	6



LD GMC Splash Guard Kit

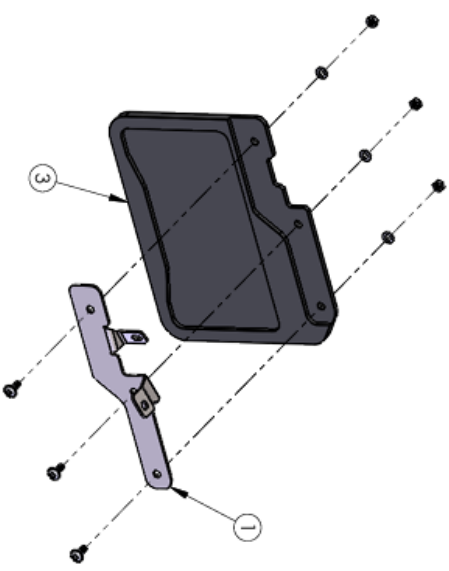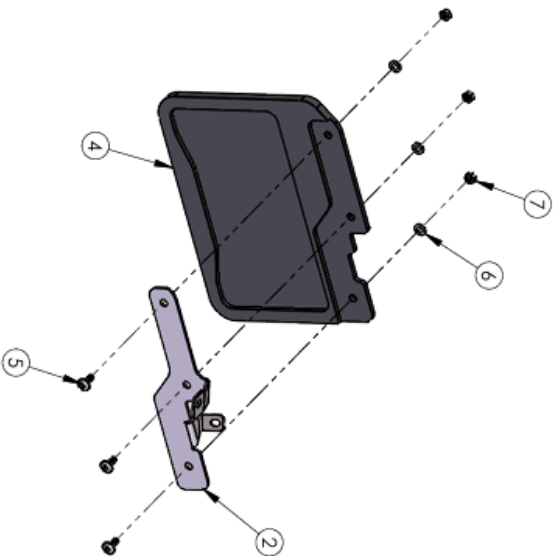

ITEM NO.	PartNo	DESCRIPTION	QTY.
1	AT1Z3000AA	FRT RH SPLASH GUARD BRKT, T1 LD GMC	1
2	AT1Z3001AA	FRT LH SPLASH GUARD BRKT, T1 LD GMC	1
3	AT1Z1000AA	FRT RH SPLASH GUARD, T1 LD COMMON	1
4	AT1Z1001AA	FRT LH SPLASH GUARD, T1 LD COMMON	1
5	AEV91233AA	M8 X 1.25 X 20 BUTTON HEAD FLANGE SOCKET, BLACK	6
6	AEV98007AB	Washer, M8 - PS-Black (91166A270)	6
7	AEV93052AA	M8 X 1.25 STOVER NUT, BLACK	6



I. AEV SPLASH GUARD BRACKET INSTALLATION

1. Rotate the steering wheel to allow access to the flare extension area. Your wheels do not need to be removed, however this would provide ample area to work with.
2. Remove your flare extensions, or if you have the AEV 35" Tire Clearance Kit, remove the closeout (Figure 1).
 - a. If you are removing an OEM flare extension, be sure to carefully remove the clips on the inside of the flare extension shown below. These are best removed by squeezing them from the backside to avoid damage (Figure 1.1).



Figure 1



Chevy

GMC

Figure 1.1



3. Remove 2 bolts to allow your AEV Splash Guard Bracket to attach to your vehicle; 1 bolt on fender and 1 bolt that connects the wheel liner bracket (Figure 2).



Figure 2

4. Install AEV Splash Guard Bracket using the bracket's 2 attachment points (Figure 3).
 - a. Torque bracket to 24Nm (18lb-ft).



Figure 3



5. Reinstall your flare extension or closeout.
 - a. Mark where the flare extension or closeout overlaps the AEV Splash Guard Bracket (Figure 4)
 - i. Pictured is a Chevy Silverado ZR2 Bison. This process will be the same for GMC brands and other trim levels. Trim only the necessary area of overlapping plastic piece.



Figure 4

6. Trim flare extension or closeout. (Figure 5)



Figure 5

7. Reinstall your flare extension or closeout.
8. Repeat step on the RH side.



II. AEV SPLASH GUARD INSTALLATION

1. Drill out the 3 pre-formed holes on your rubber splash guard piece using M10 or 3/8" drill bit (Figure 6).



Figure 6

2. Install the rubber piece onto your AEV splash guard bracket. This bracket will glove into the pre-molded recess on the rubber piece (Figure 7).
 - a. Be sure the rubber splash guard sits in front of the bracket.
 - b. Drive the provided bolts forward in vehicle, so the bolt head is facing rearward.
 - i. Tighten bolts until 3 threads are showing past the nut.



Figure 7

3. Repeat all steps on the RH side.



Torque Spec for attaching AEV Splash Guard Bracket to Vehicle

Vehicle Part	Hardware	Torque Spec
AEV Splash Guard Bracket	M8 bolts	24Nm (18lb-ft)